

This is a general specification leaflet ; for specific applications not covered herein, contact Suntec.


The SUNTEC TV valve is a pressure regulating valve.

APPLICATIONS

- Light and heavy oil.
- Capacity up to 5000 l/h.
- May be used with the SUNTEC T pump.

VALVE OPERATING PRINCIPLE

The pressure of the nozzle line is adjusted with the adjusting screw of the TV valve. The oil in excess to nozzle requirement is dumped to the return.

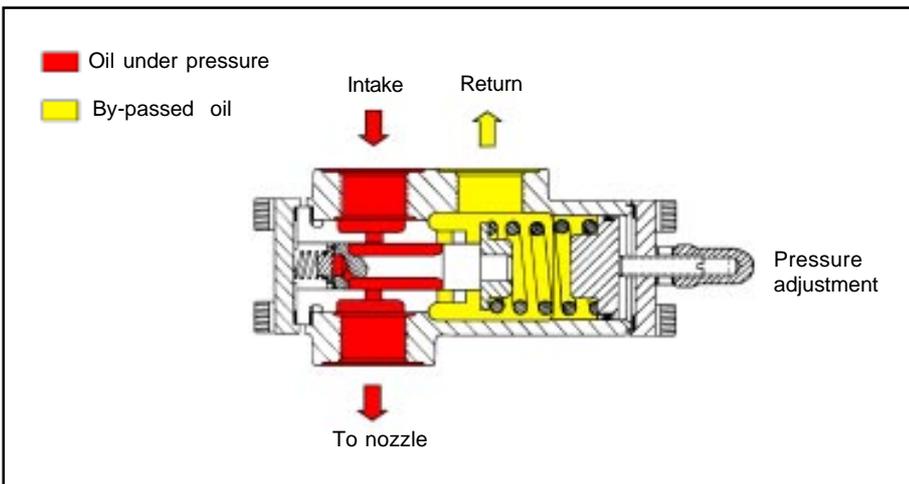

VALVE IDENTIFICATION

*(Not all model combinations are available
Consult your Suntec representative)*

TV : Pressure regulating valve

TV

Pressure range :

10 : 2 - 10 bars

40 : 7 - 40 bars

40

01

Regulation type :

01 : by screw

02 : by piston,
for modulating purpose


1

Revision number

INSTALLATION

Two pipe system : oil in excess is returned to tank.

One pipe system : oil in excess is returned to pump suction.

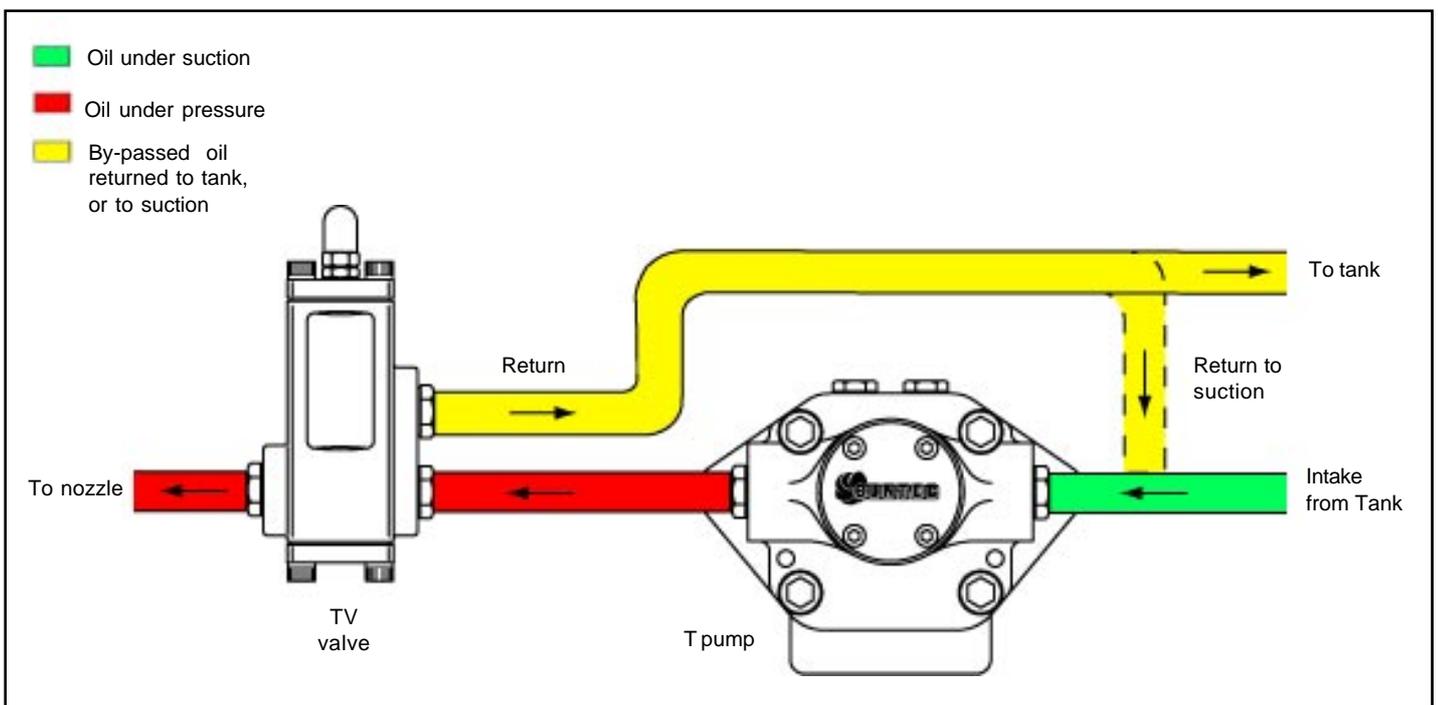

TECHNICAL DATA

General

Connection threads Cylindrical according to ISO 228/1

Weight 3 kg

Hydraulic data

Pressure ranges 10 : 2 - 10 bars
(delivery pressure setting : 7 bars)
40 : 7 - 40 bars
(delivery pressure setting : 20 bars)

Operating viscosity 4 - 450 cSt

Oil temperature 0 - 140°C max. in the valve.

MOUNTING POSITION

TV valve may be mounted in any position.


PRESSURE ADJUSTMENT

Remove cap-nut **1** and washer **2**, unscrew lock-nut **4**.



To increase pressure, turn adjusting screw **3** clockwise.

To decrease the pressure, turn screw anticlockwise.

Block lock-nut **4**, refasten washer **2** and cap-nut **1**.

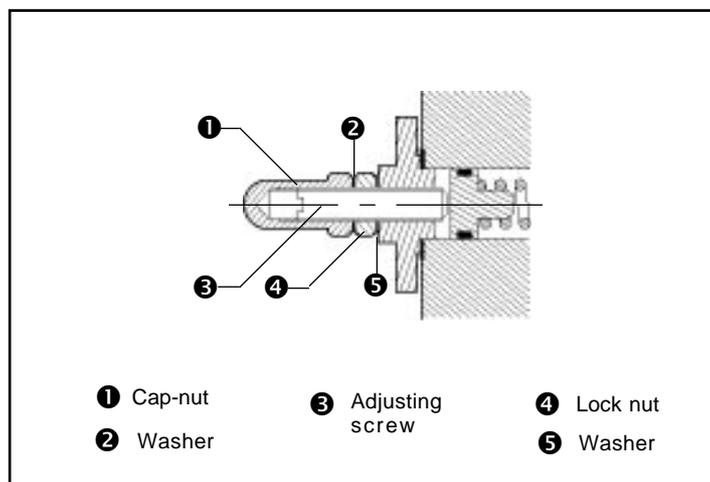

DIMENSIONS

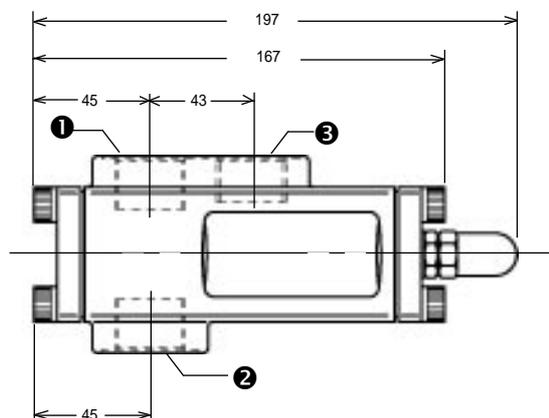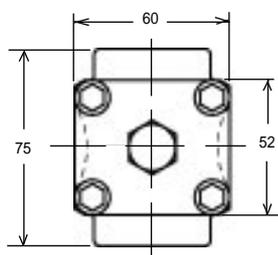

1 Intake or nozzle outlet

2 Nozzle outlet or intake

3 Return